 

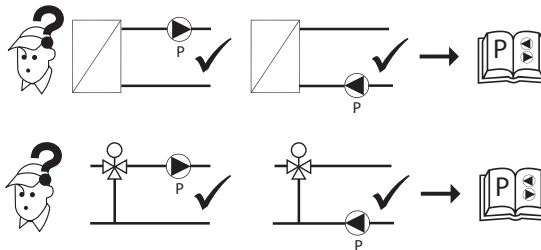 
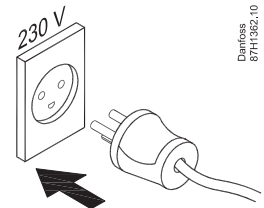
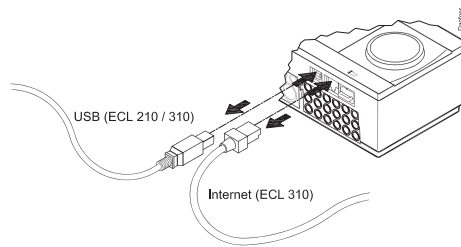 


Installation Guide

 
ECL Comfort 210 / 296 / 310, A247 / A347 (code no. 087H3808, 087H3822)

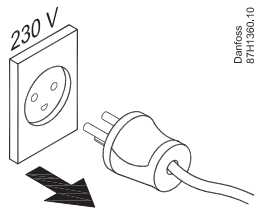


A247.1, ex. a:

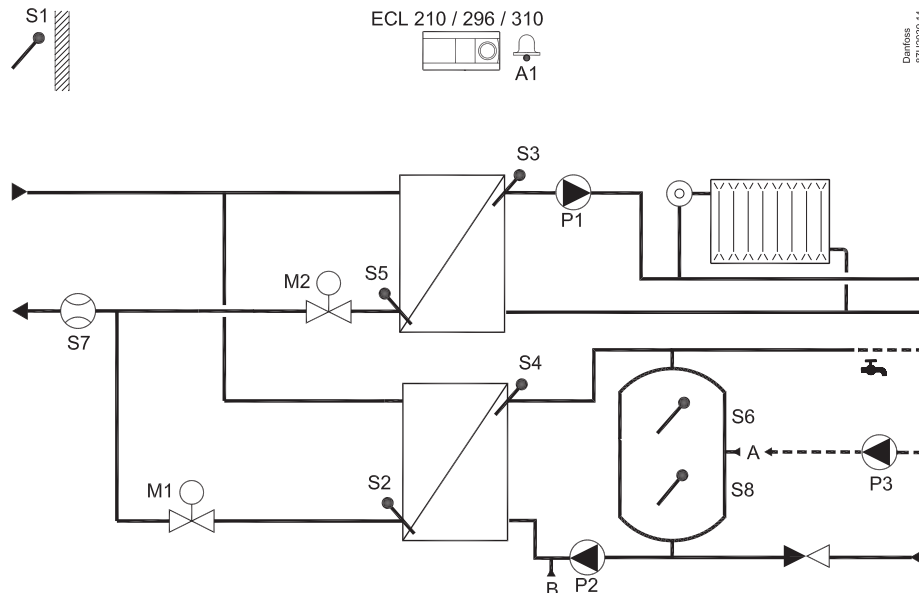


A247.1, ex. b:

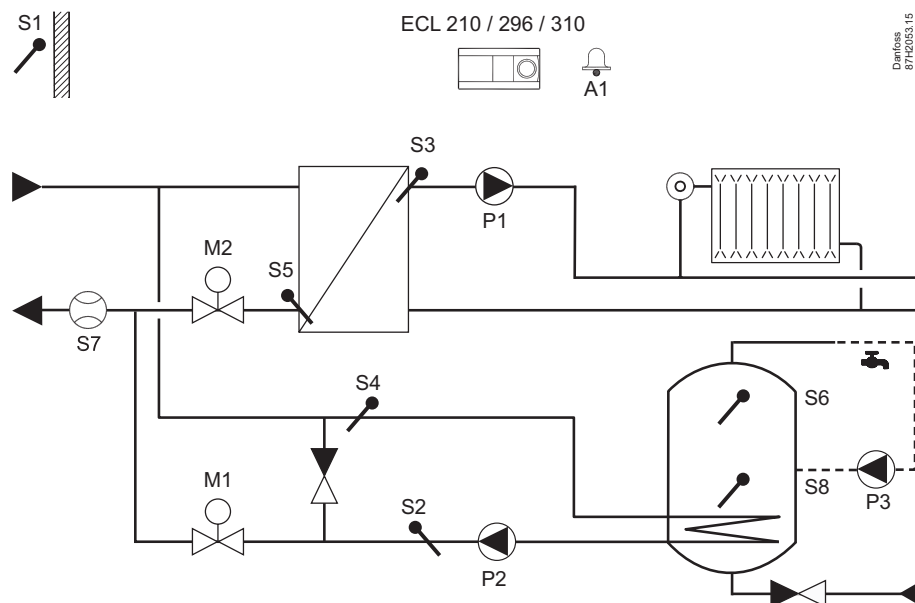


A247.1, ex. c:

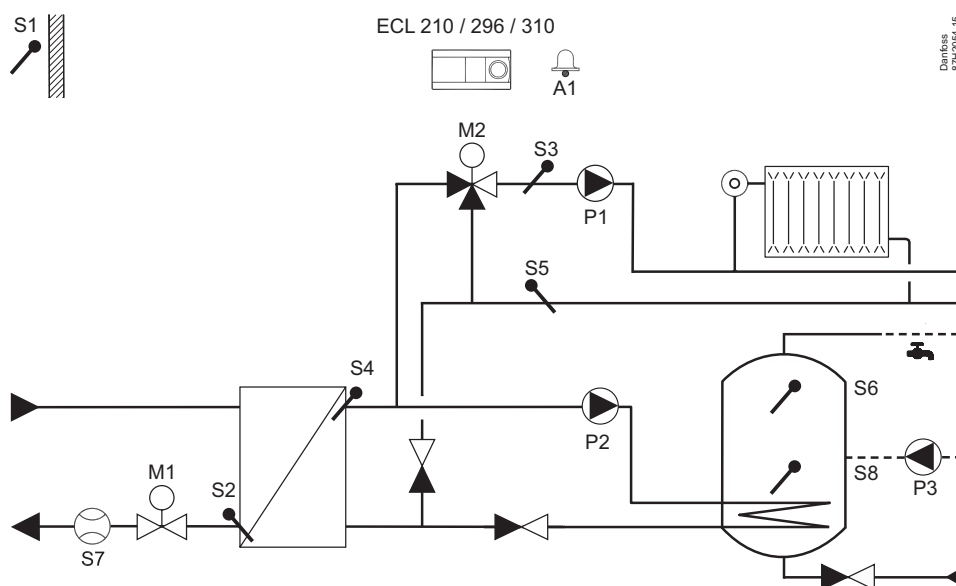 


A247.2, ex. a:

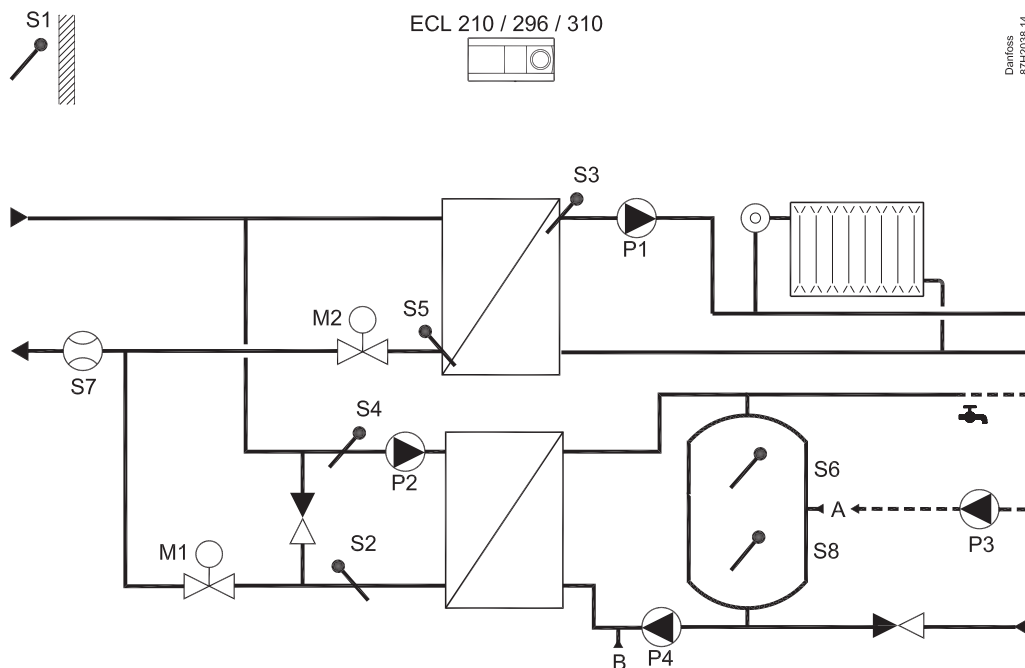 


A247.2, ex. b:

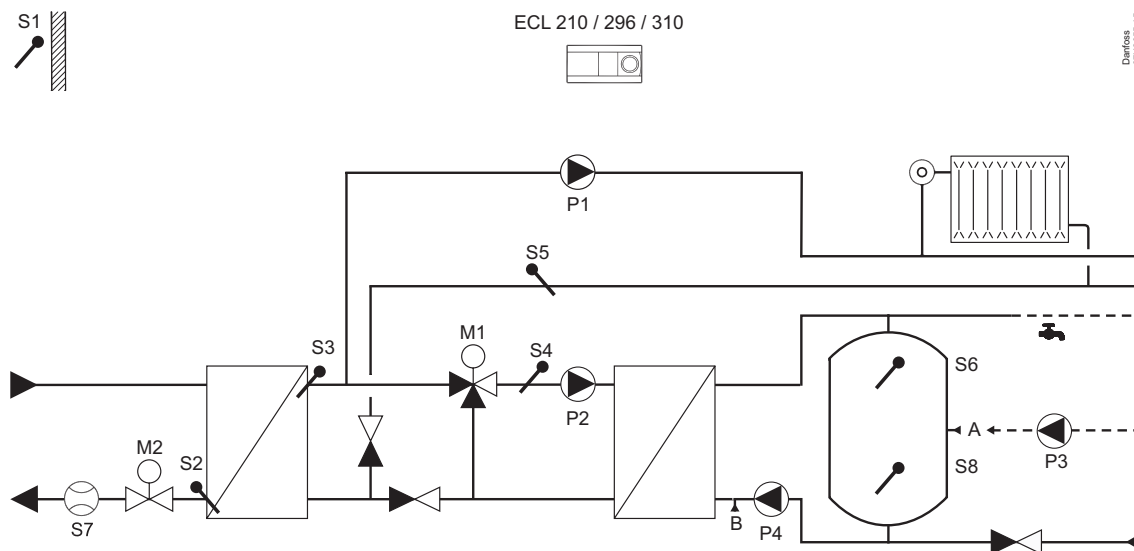 


A247.2, ex. c:

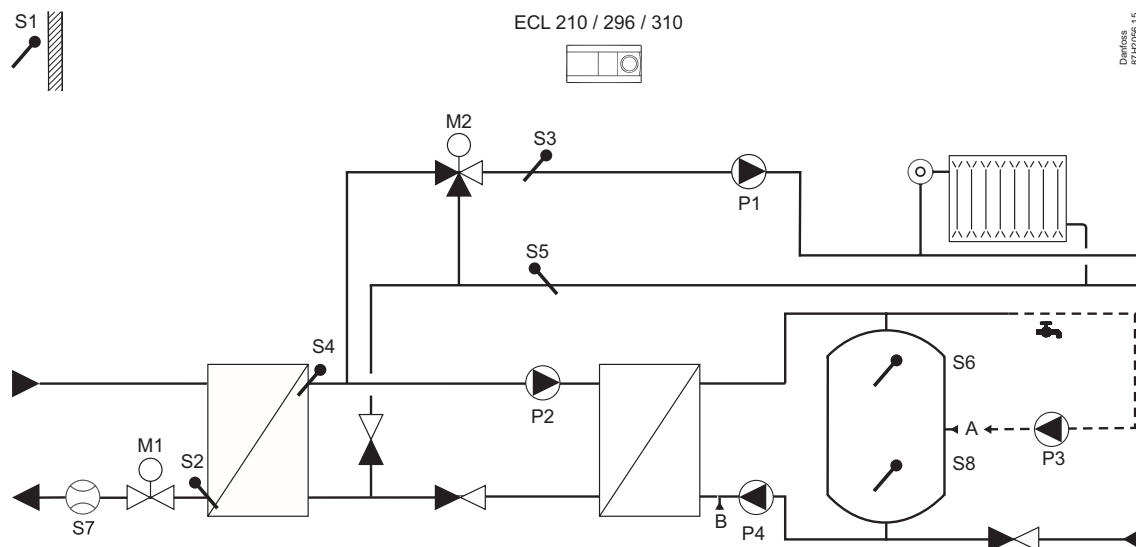 


A247.3, ex. a:

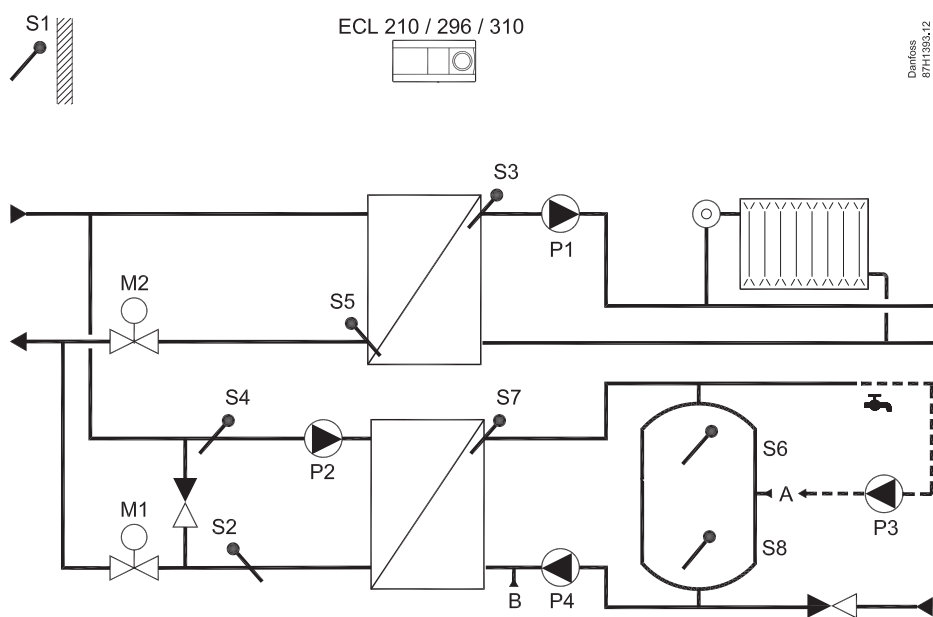 


A247.3, ex. b:

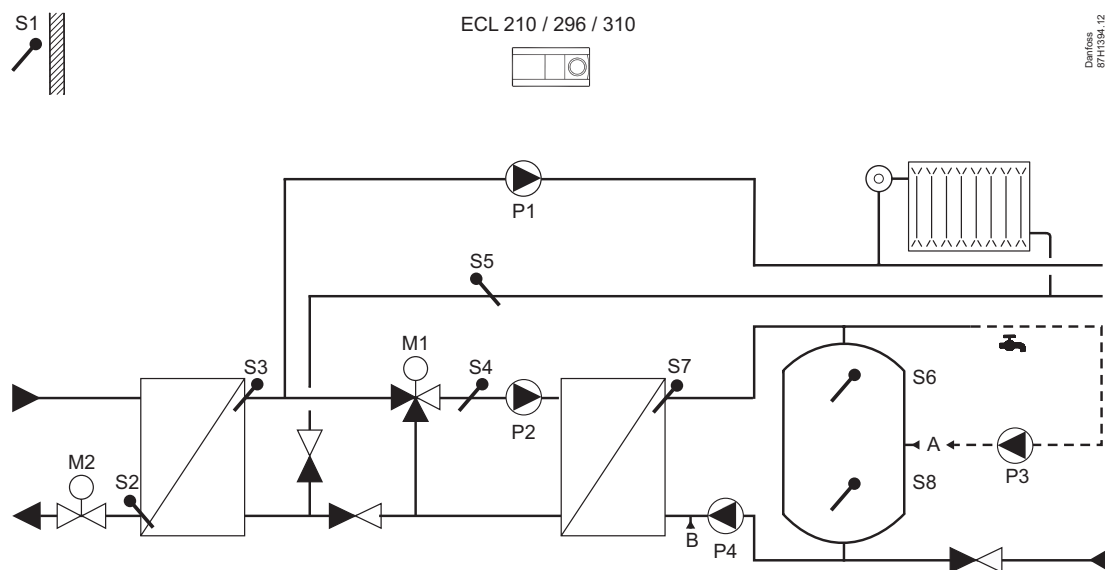 


A247.3, ex. c:

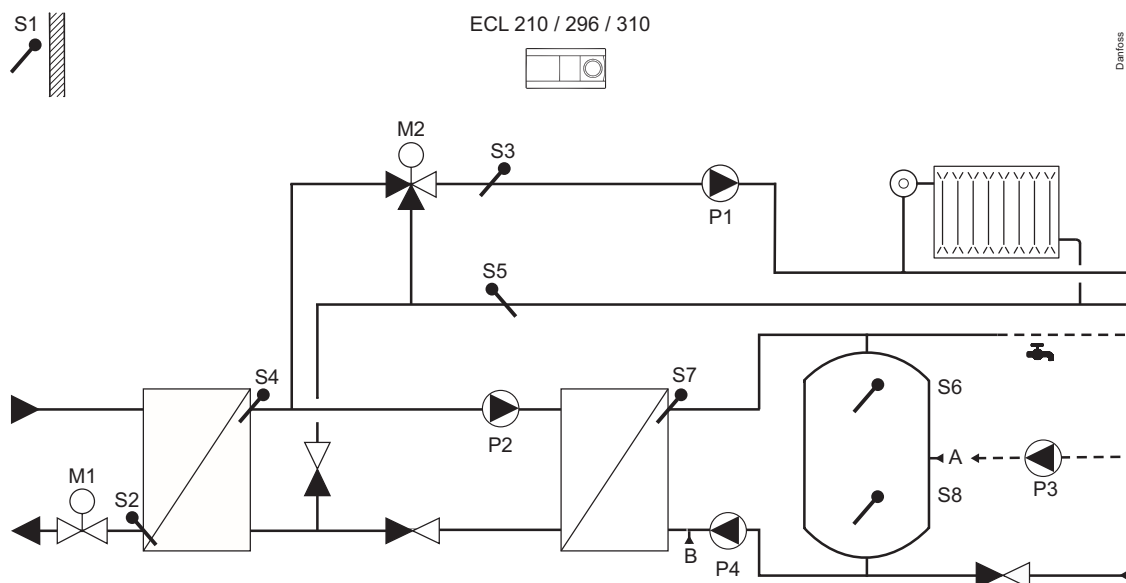 


A347.1, ex. a:

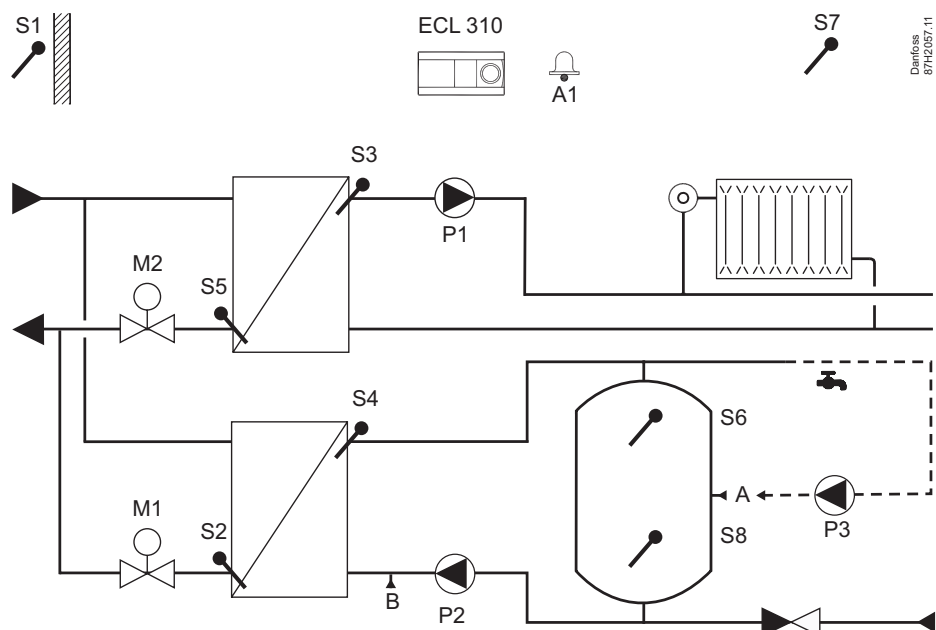 


A347.1, ex. b:

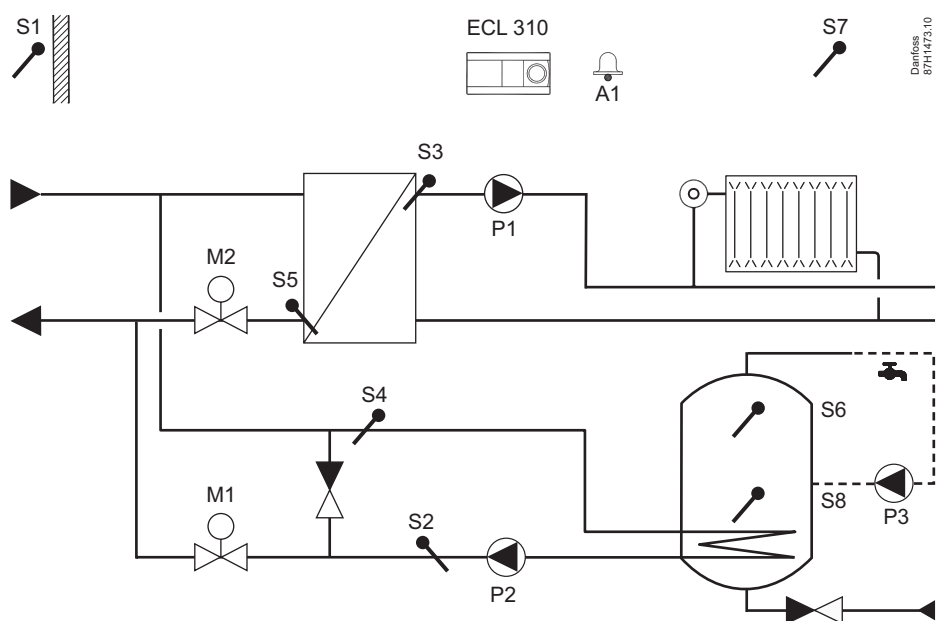 


A347.1, ex. c:

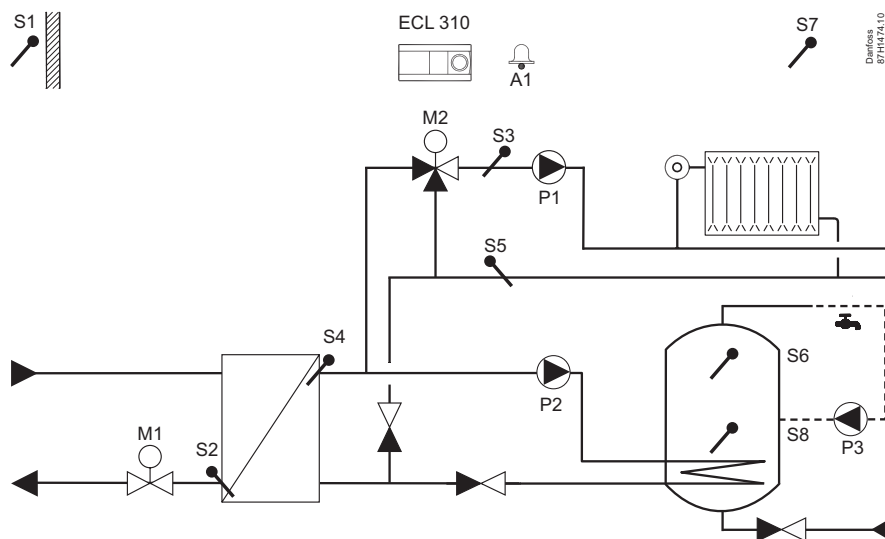 


A347.2, ex. a:

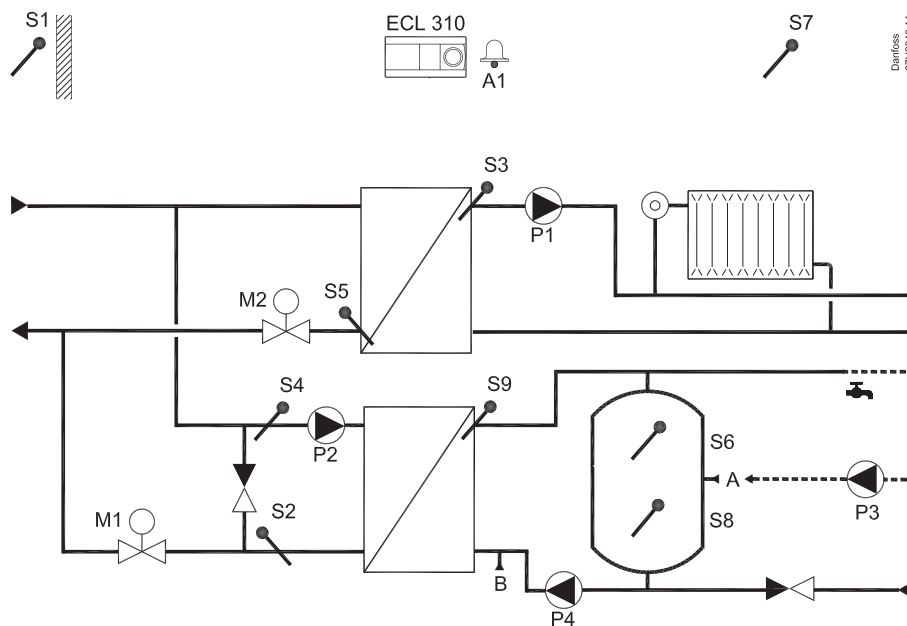 


A347.2, ex. b:

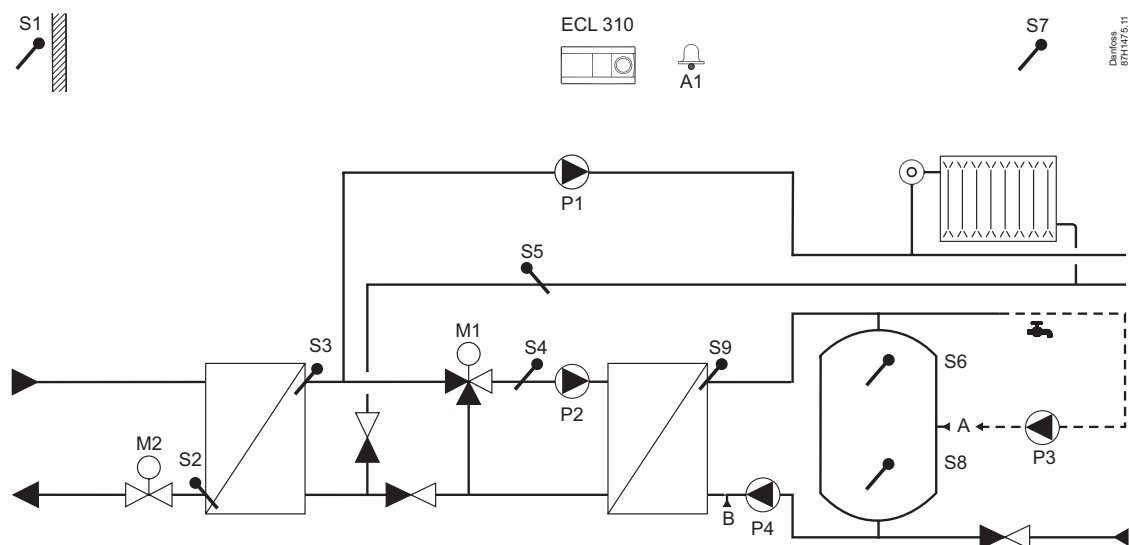 

A347.2, ex. c:

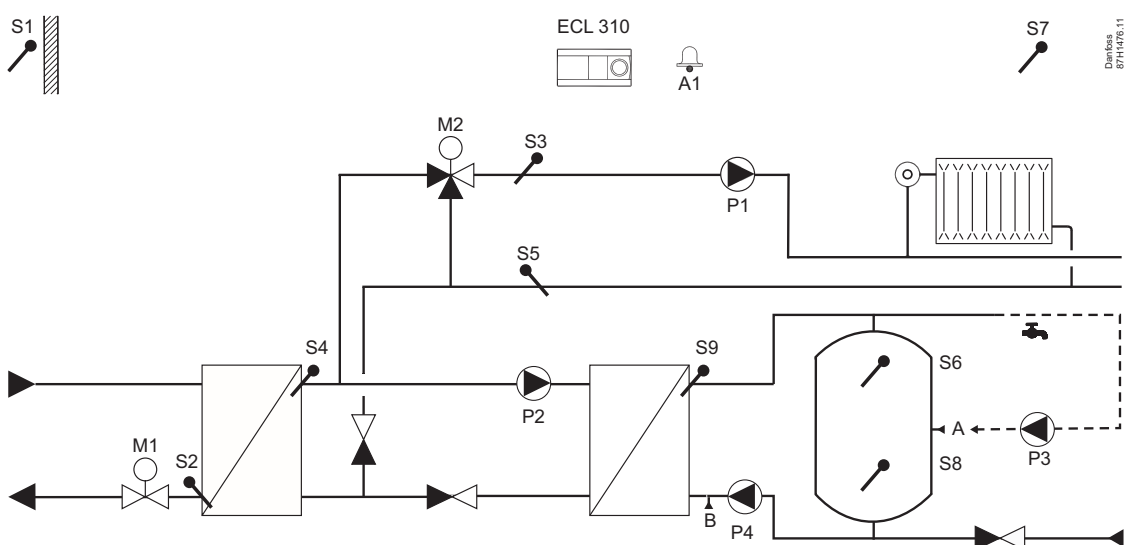 

A347.3, ex. a

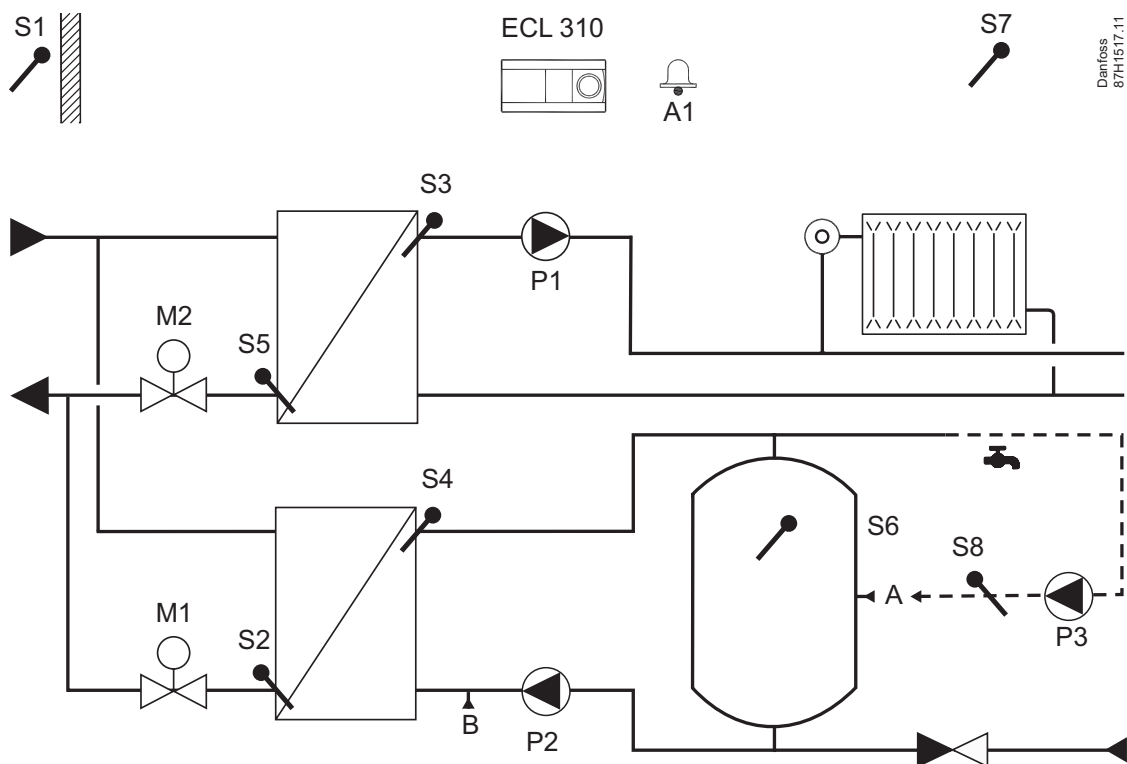 


Danfoss
87H1517.11


ECL Comfort 210 / 296 / 310:

230 V a.c.


R 	4 (2) A / 230 V a.c.
R 	
Tr 	0,2 A / 230 V a.c.

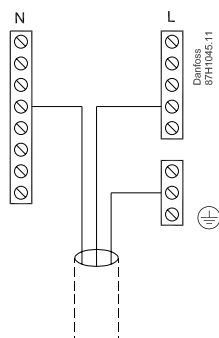 

230 V a.c., A247.1

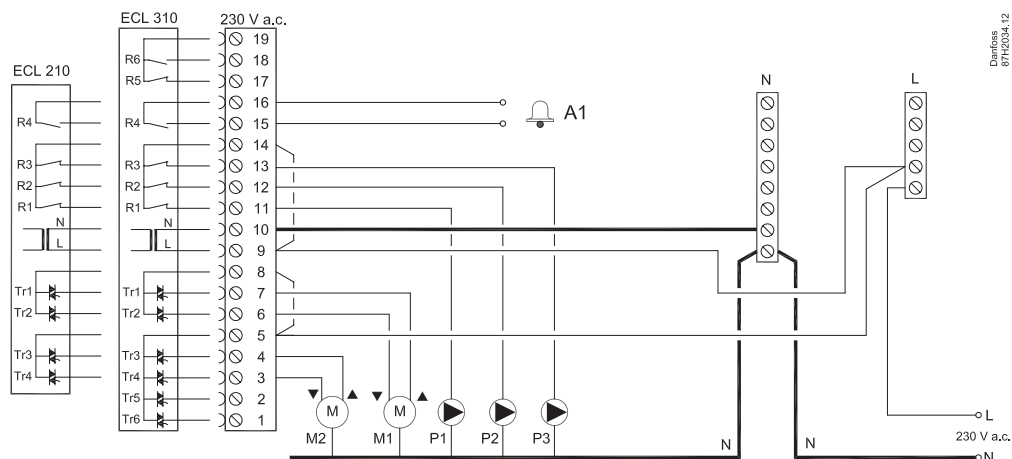 


230 V a.c., A247.2 / A247.3

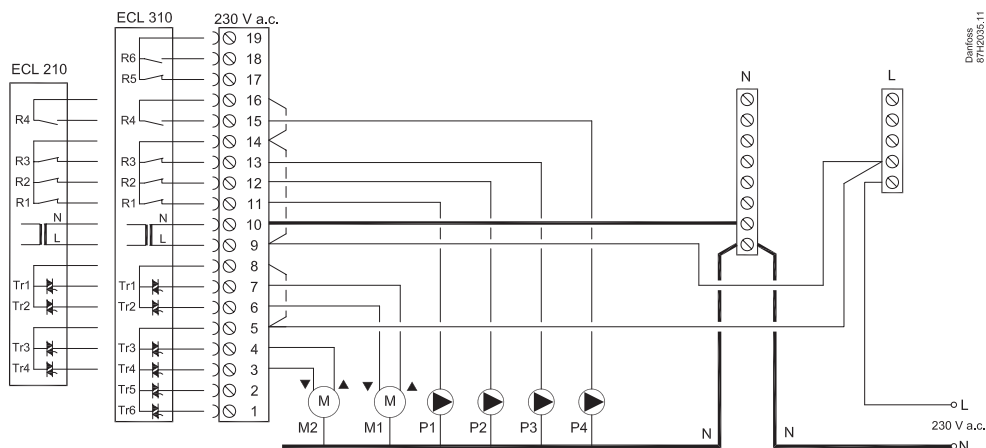 


230 V a.c., A247.1, A247.2, A247.3

 ECL 296

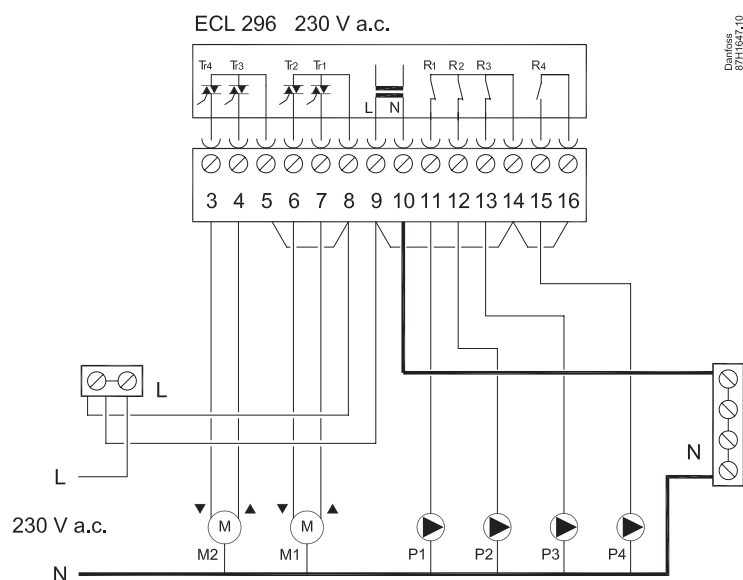


Danfoss
8711647.10

 230 V a.c., A347.1

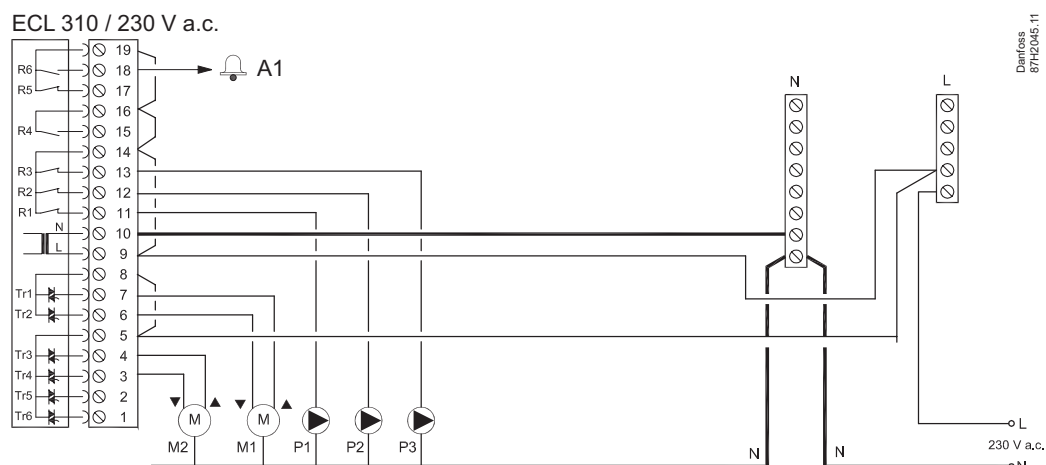

Danfoss
8712046.11

 230 V a.c., A347.2 / A347.3

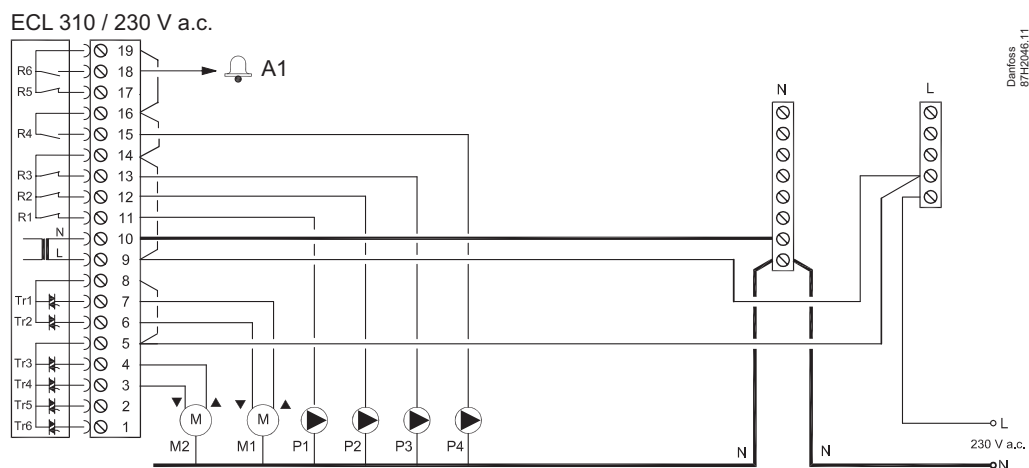

Danfoss
8712046.11


ECL Comfort 210 / 296 / 310:

24 V a.c.

R		4 (2) A / 24 V a.c.
R		
Tr		1 A / 24 V a.c.


24 V a.c., A247.1 / A347.1

 ECL 310 / 24 V a.c.

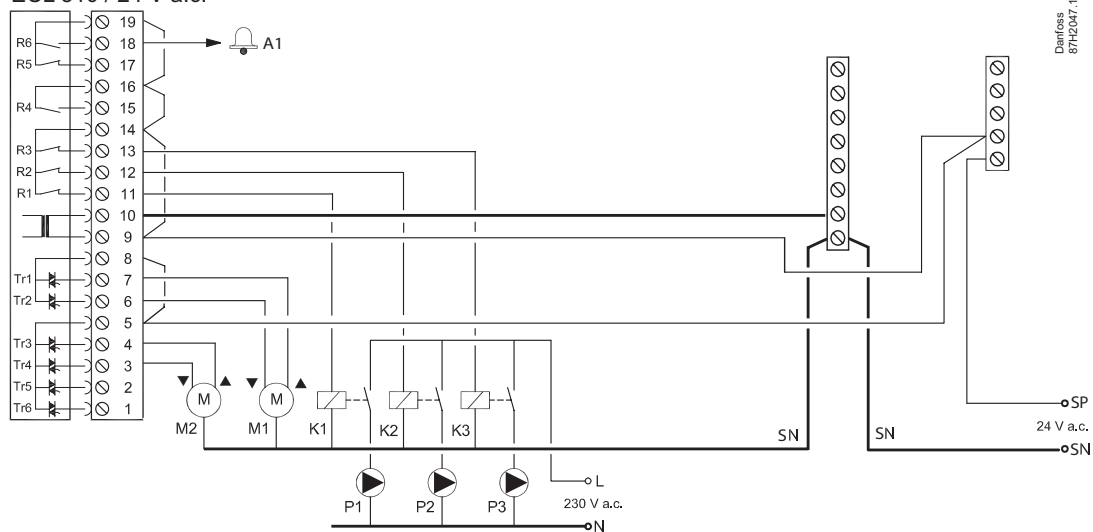


24 V a.c., A247.2 / A247.3 / A347.2 / A347.3

 ECL 310 / 24 V a.c.

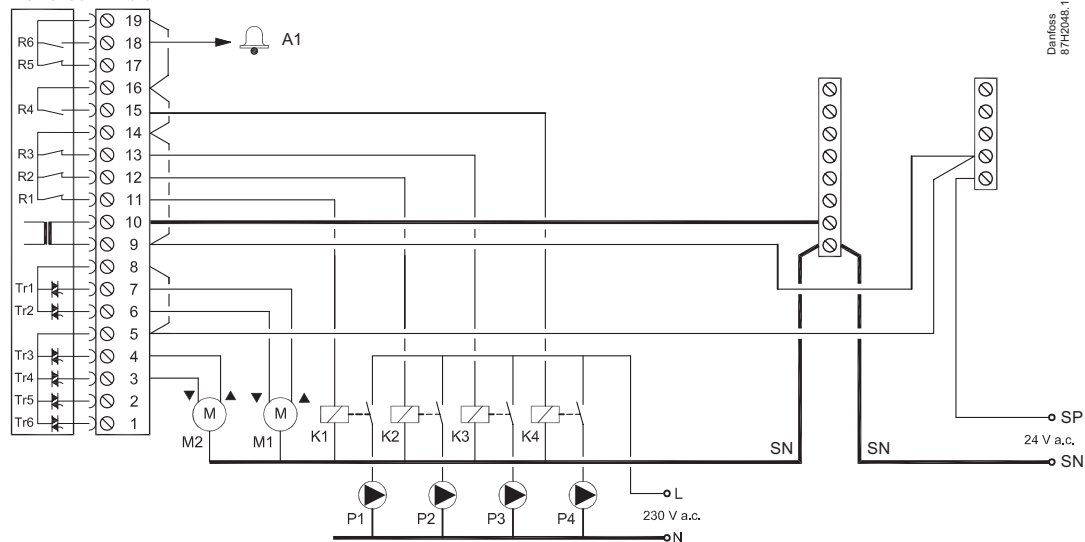


230 V a.c. / 24 V a.c. , safety thermostat

 1-step closing

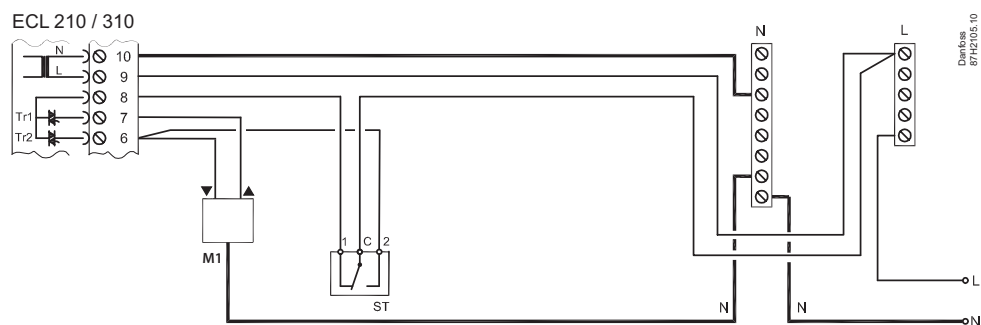


230 V a.c. / 24 V a.c. , safety thermostat

 1-step closing

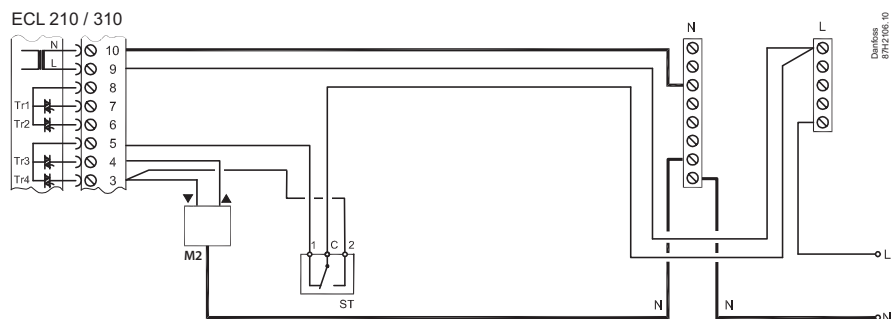


230 V a.c. / 24 V a.c. , safety thermostat

 1-step closing

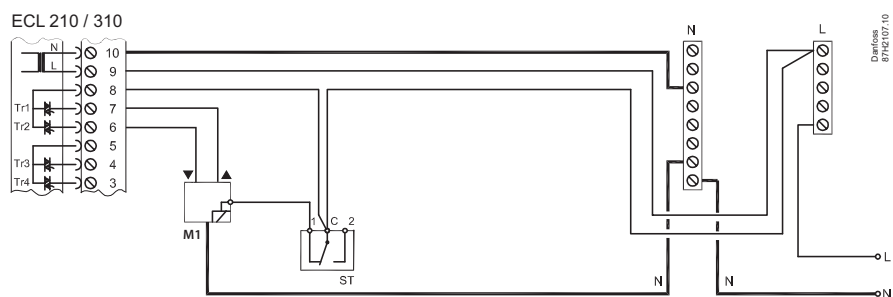

230 V a.c. / 24 V a.c. , safety thermostat

 
1-step closing

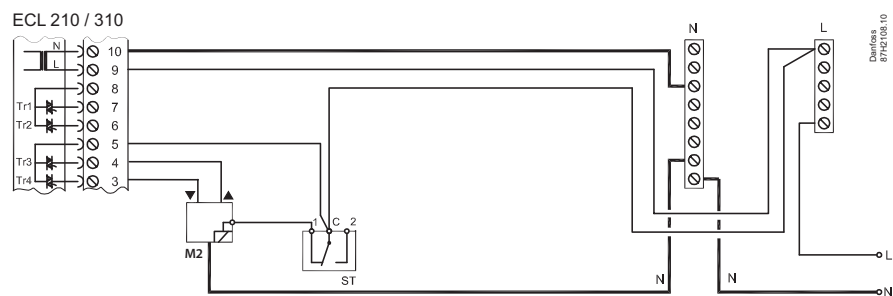

Installation Guide, ECL Comfort 210 / 296 / 310, A247 / A347


230 V a.c. / 24 V a.c. , safety thermostat

 2 step closing


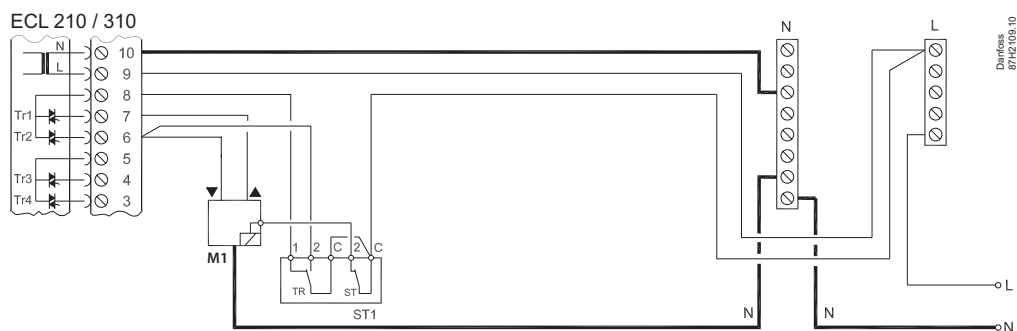


230 V a.c. / 24 V a.c. , safety thermostat

 2 step closing

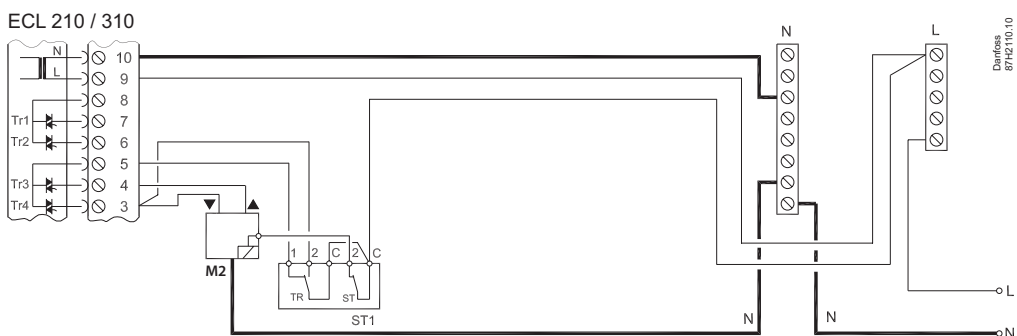


Pt 1000 (1000 Ω / 0 $^{\circ}$ C)

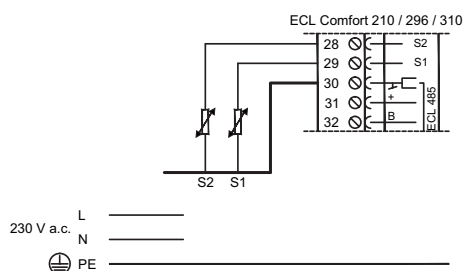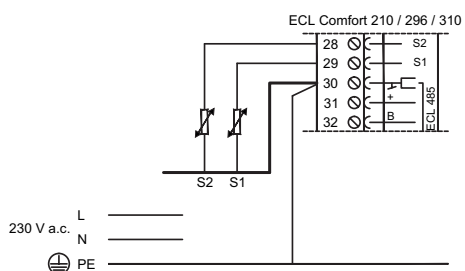  

 **Pt 1000** (1000 Ω / 0 °C)


A247.1 / A247.2 / A247.3

	S1	S2	S3	S4	S5	S6	S7	S8
A247.1	✓	✓	✓	✓	✓	✓		✓
A247.2	✓	✓	✓	✓	✓	✓		✓
A247.3	✓	✓	✓	✓	✓	✓	✓	✓

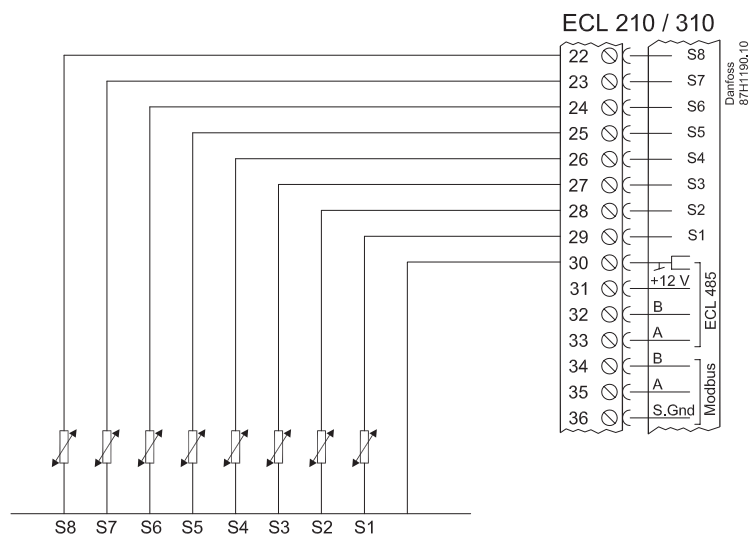 

A347.1 / A347.2 / A347.3


	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10
A347.1	✓	✓	✓	✓	✓	✓	✓	✓		0 - 10 V
A347.2	✓	✓	✓	✓	✓	✓	✓	✓	✓	0 - 10 V
A347.3	✓	✓	✓	✓	✓	✓	✓	✓		0 - 10 V

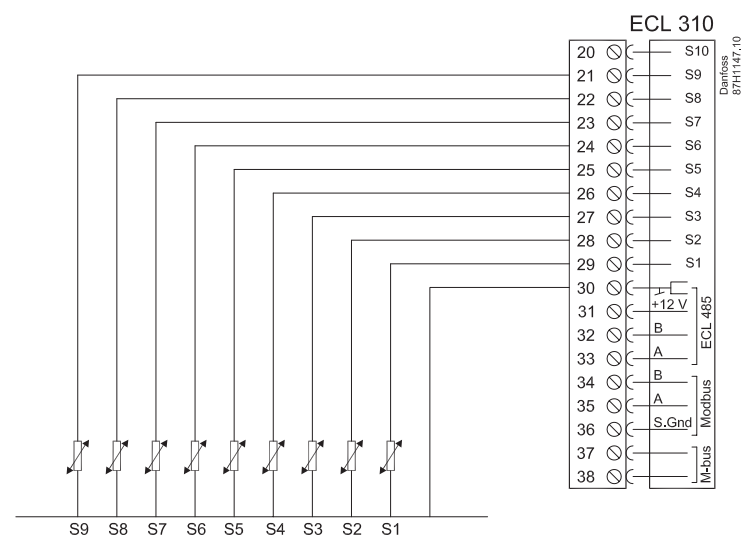 

A247.1 / A247.2



 S7

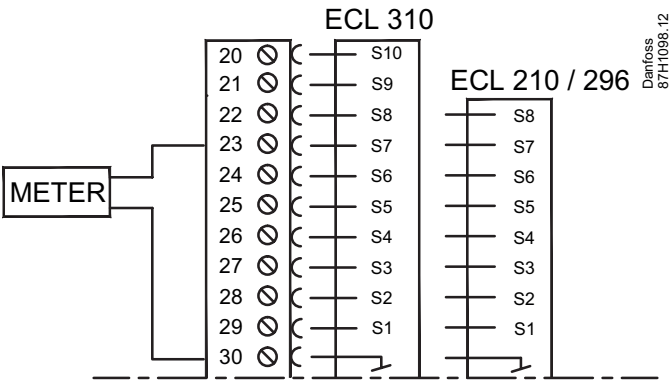

A247.1 / A247.2

 


S7




A / B ?

A:

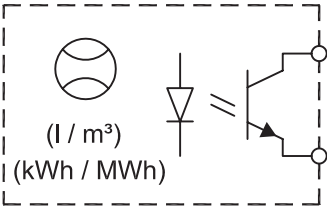

Danfoss
87H1457.10

 
B:

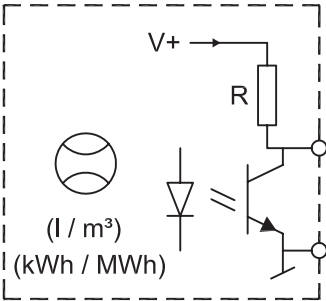

Danfoss
87H1458.10




 A:

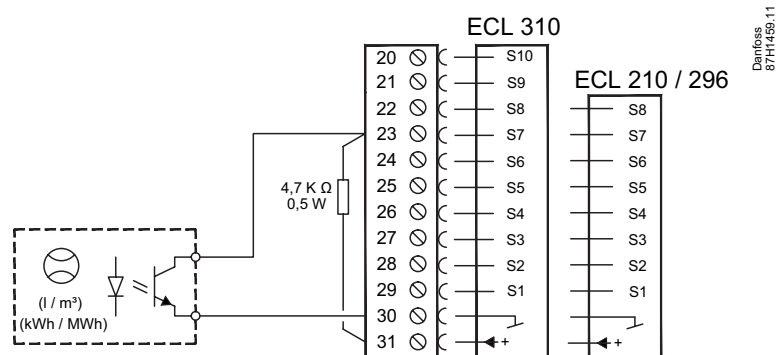


Danfoss
87H1458.11

 B:

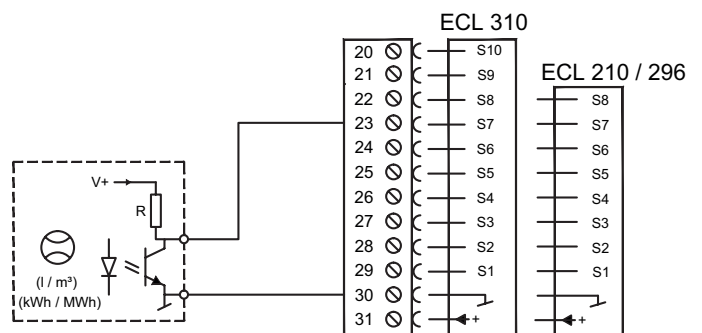


Danfoss
87H1460.11

 A247 / A347


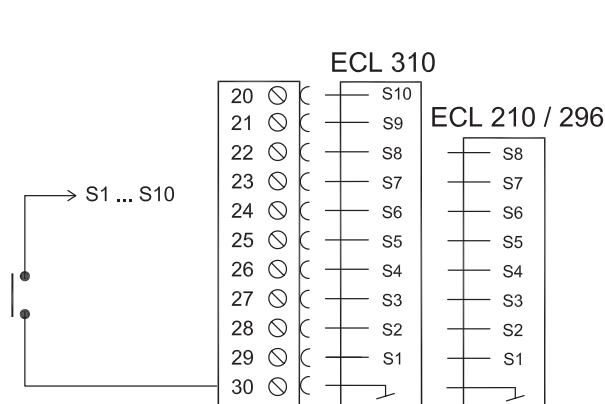


Danfoss
87H1478.11

 
A347.1 / A347.2 / A347.3

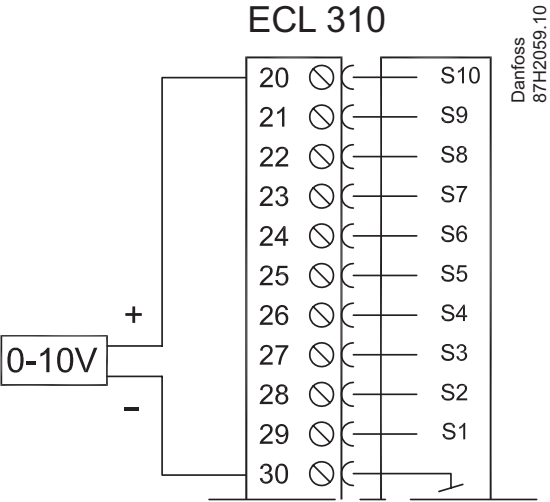


ECA 30 / 31

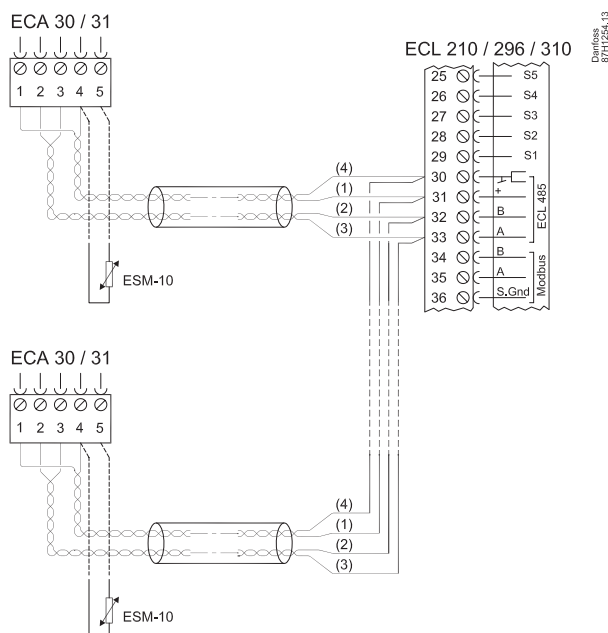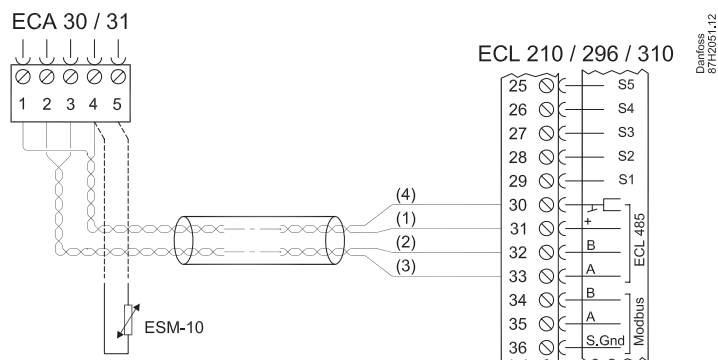  


Master / slave

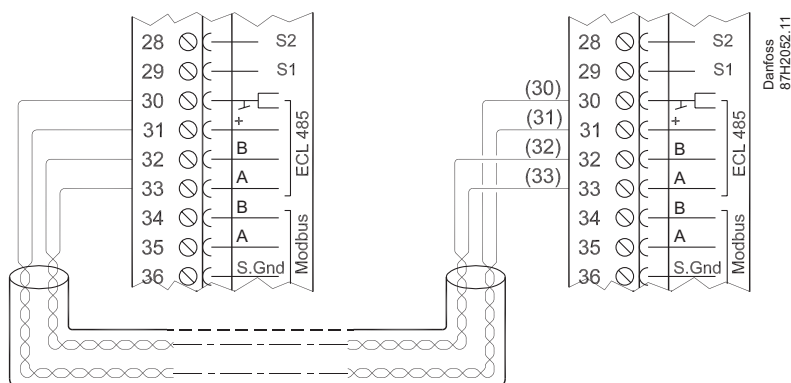 


Modbus

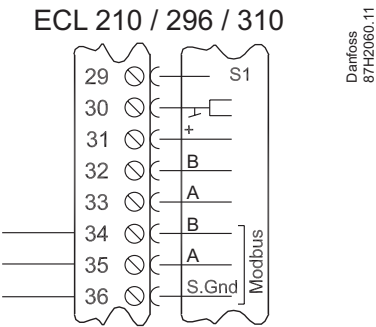 



M-bus

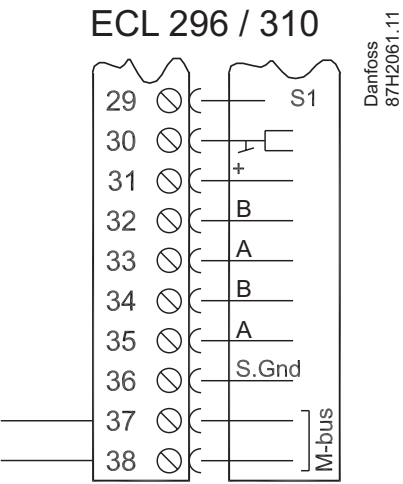 

M-bus

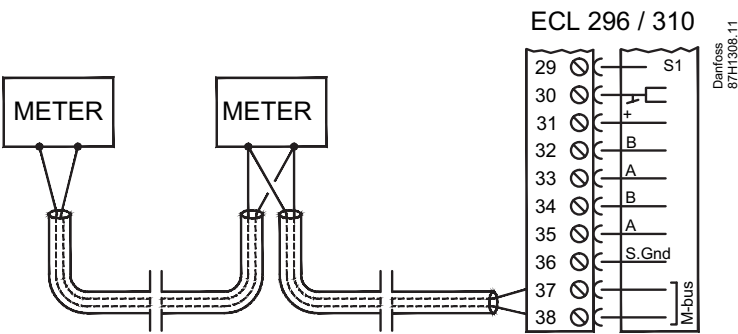 


Pt 1000 (IEC 751B, 1000 Ω / 0 °C)

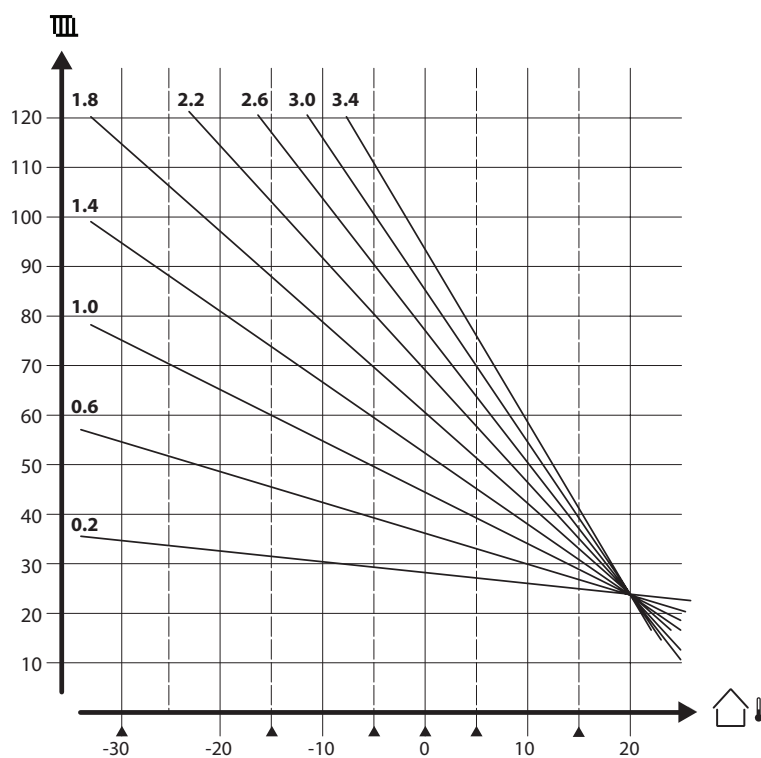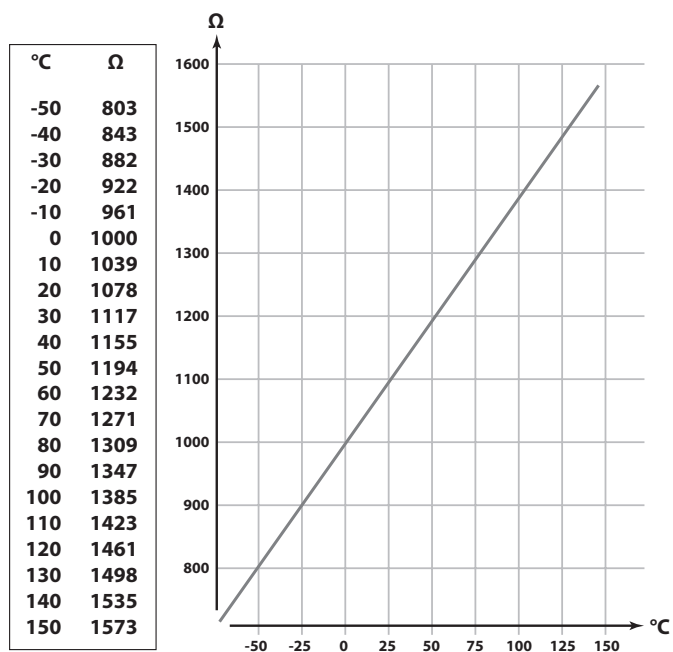  


ECA 30

 
1

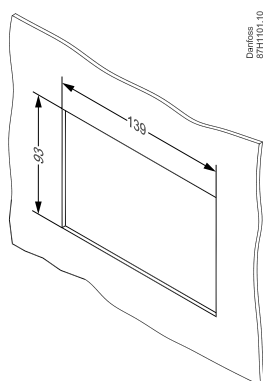


2

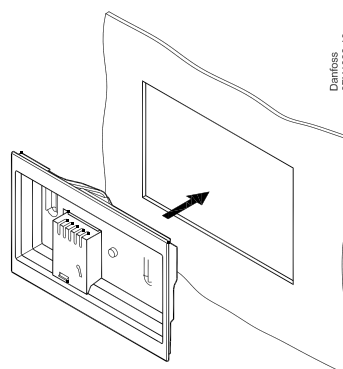 


3

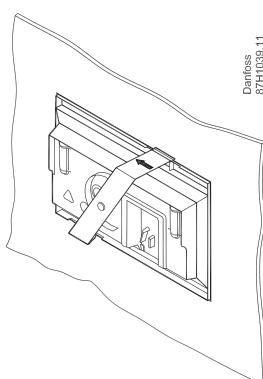 


4

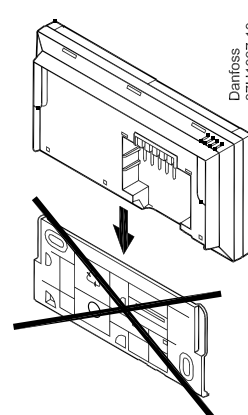 


5

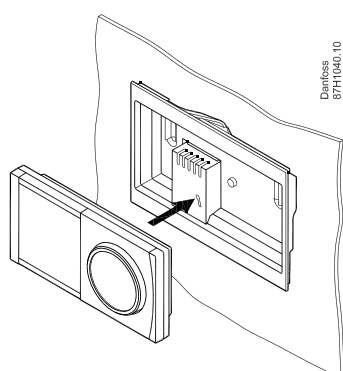 


6

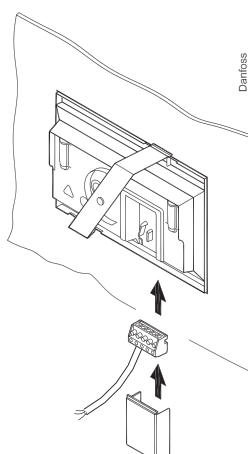 





7

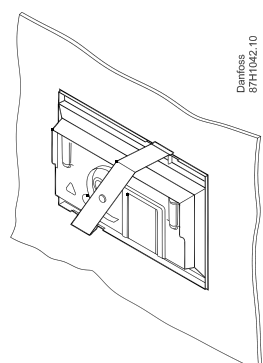 

8

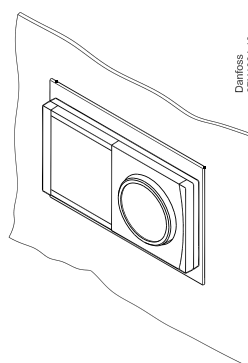 

    Installation Guide, ECL Comfort 210 / 296 / 310, A247 / A347

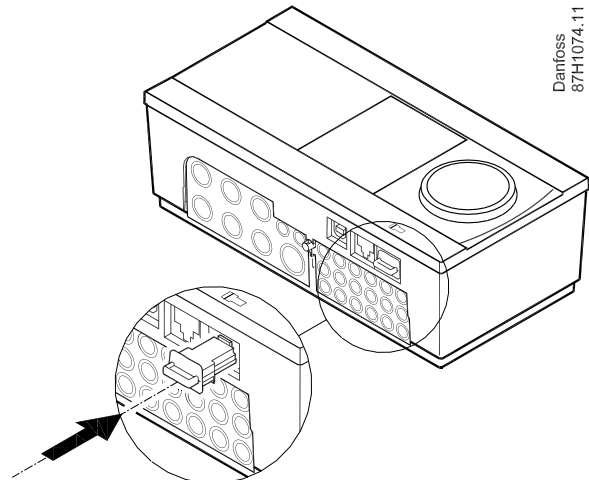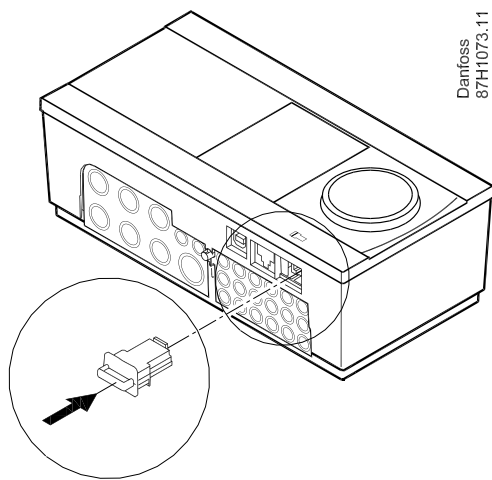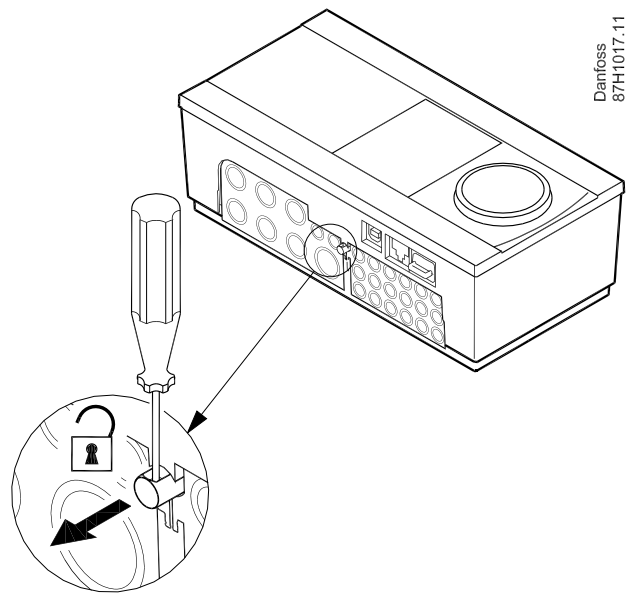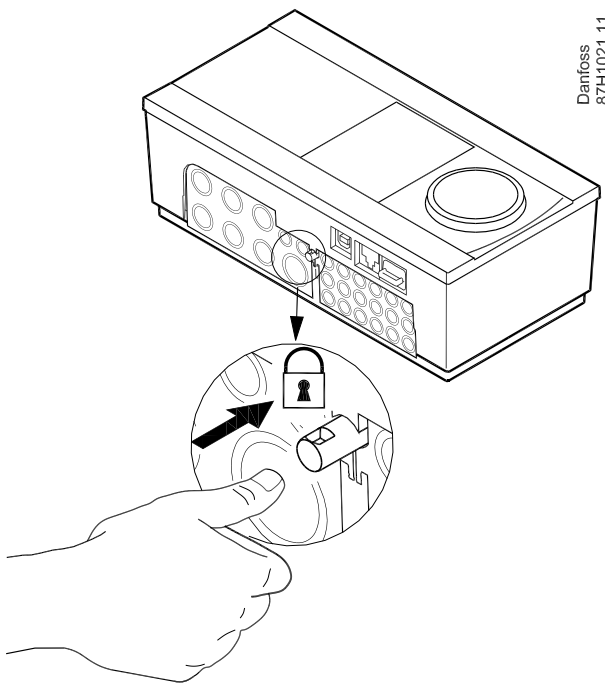

?  **ECL Comfort 210 / 296 / 310, A247 / A347: www.heating.danfoss.com**

?  **<https://www.youtube.com/user/DanfossHeating>
-> Playlists -> How-to Videos -> District Energy installation videos**



Danfoss A/S

Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.